

Leica Infinity

Your indispensable bridge
between field and office



Data-processing powerhouse

Leica Infinity – the geospatial office software built for Leica instruments – provides a seamless workflow between field and office to ensure quality at each work phase and improve your overall productivity. And now Infinity reaches a new milestone with its latest release, Leica Infinity which can process data from digital levels, total stations, GNSS sensors and even scanners, making it your indispensable bridge between field and office.



Infinitely connected

Leica Infinity is the only true one-bridge solution between Leica field instruments and CAD software. Stay infinitely connected and keep projects moving with fast accessibility, seamless data transfer and a user-friendly interface that will give you greater traceability and control. Leica Infinity also enables faster project overview with 3D, multiple-perspective viewing and a clean, consistent look and feel across all modules.



Collect. Verify. Report.

Leica Infinity easily processes data from multiple sites and survey teams and different instrument types. Edit, archive and export directly to CAD applications. You rely on Leica Geosystems instruments every day. Now you can rely on the software solution that connects all of your Leica Geosystems instruments and allows you to collect, verify and report all survey and stake out data in one easy-to-use platform.

Leica Infinity Office Software - Core

MAP SERVICES

Esri World Imagery

Clip Base Map

Feature Info

Get Feature

Google Earth Export

COORDINATES

Compute Project Coordinates

Coordinate Systems Manager

Transform Local Grid to Local Grid

COGO FUNCTIONALITY

Measure Point to Point

Compute Point (COGO)

COGO Report

Shift/Rotate/Scale

Shift/Rotate/Scale Report

FEATURES PROCESSING

Code Table Manager

Import/Export/Create Codelists

Assign Blocks, Layers & Linestyles

Copy Features & Layers from CAD

Create features: Lines, Splines, Arcs & Areas

TOOLS

Rename Features Tool

Satellite Availability Tool

GNSS Reference Station Download

Precise Ephemeris Download

Antennas, Targets, and Layer Manager

Localisation Tool

IMAGES

Link/Unlink Images

Georeference Images

SERVICES

GeoCloud Drive, ConX, JetStream

HxGN SmartNet, HxGN Content Program

Leica Spider X-pos

Open Street Map

Map Services WFX, WMS, WMST

ArcGIS Online

Portal for ArcGIS

Bricsys 24/7

Autodesk BIM 360

Bentley ProjectWise

Procure

vGIS

SURVEY & STAKEOUT

Import Staked points Results

Stakeout Report

Checked Points Report

Import Reference Line Results & Report

Import Staked & Checked Infrastructure

Staked & Checked Infrastructure Report

Import Field Data Results

Data Source Report

Create Point, Station, Observation

IMPORT

SmartWorx Viva, Captivate Job - DBX

GNSS data - RINEX, JOB, ION, SP3

Level Data - LEV, GSI

Observation Data - GSI, RAW, RW5

HeXML/LandXML - XML

Coordinate Systems - DAT, LOC, DC, CAL

Zeno Mobile - ZIP

Aibot - UAV

LGO Project /CSYS

ASCII

SKI ASCII - ASC

Images - JPG, PNG, TIFF, PDF

Georeferenced Images - JPG, PNG, TIFF

DJI GNSS Flight Data - DJI

BLK360 Images Group - BLK360

Point Clouds - PTS, PTX, LAS, LAZ, E57, XYZ, SDB

CAD Data - DXF, DWG, DGN

BIM-IFC

ESRI - SHP, Geodatabase

GeoJSON

Geo Viewer - KML, KMZ

InfraGML - XML

NILIM - XML

Trimble - TTM, JXL

NGS - GVX

NGS - DSDATA

EXPORT

SmartWorx Viva, Captivate Job - DBX

SmartWorx, System 1200, GPS 900 - DBX

iCON field

ASCII

HeXML - XML

GSI

AutoCAD - DXF, DWG

ESRI - SHP

ESRI File Geodatabase - GDB

Zeno Data Model - GDB

Point Clouds - PTS, PTX, LAS, LAZ, E57, LGS, PLY, PTG

Export data using stylesheet

Coordinate Systems

Geo Viewer - KML, KMZ

Images - JPG, PNG, TIFF, GeoTIFF

Georeferenced DEM - TIFF, GeoTIFF

GNSS raw data - RINEX

SKI ASCII - ASC

Aibotix AiProFlight

GeoMos Now!

Ellipse neo

NGS Blue Book - B and G Files

NGS - GVX

Pregeo

Bentley - FWD

Leica Infinity Office Software - Options

	Survey	Advanced Survey	Engineering	Infrastructure	Point Clouds from Images	Point Clouds Registration
PROCESSING TPS						
Traverse, Sets of Angles & Foresights	<input type="checkbox"/>					
Update Stations	<input type="checkbox"/>					
Processing Reports	<input type="checkbox"/>					
PROCESSING GNSS						
Single Frequency Data Processing (L1)	<input type="checkbox"/>	<input type="checkbox"/>				
Multifrequency Data Processing (L1, L2, L5)		<input type="checkbox"/>				
Multiconstellation Data Processing (GPS GLO GAL BEI QZSS)	<input type="checkbox"/>	<input type="checkbox"/>				
Static & Kinematic Processing	<input type="checkbox"/>	<input type="checkbox"/>				
Manual & Automatic Processing	<input type="checkbox"/>	<input type="checkbox"/>				
Data Analysis Tools	<input type="checkbox"/>	<input type="checkbox"/>				
Observations & Positions Residuals	<input type="checkbox"/>	<input type="checkbox"/>				
Interactive Analysis Charts	<input type="checkbox"/>	<input type="checkbox"/>				
Processing Reports	<input type="checkbox"/>	<input type="checkbox"/>				
PROCESSING LEVEL						
Adjust, Join & Split Level Line	<input type="checkbox"/>					
Height Observation	<input type="checkbox"/>					
Add TP to Library	<input type="checkbox"/>					
Level Reports	<input type="checkbox"/>					
SURFACES & VOLUMES						
Create Surface: 3d Refined, Regular, Interpolated			<input type="checkbox"/>			
Create Surface: 2.5d DSM, DTM			<input type="checkbox"/>			
Add, Remove Features			<input type="checkbox"/>			
Cut Features			<input type="checkbox"/>			
Trim, Remove, Fill holes			<input type="checkbox"/>			
Contours			<input type="checkbox"/>			
Volumes - Stockpile, To Point, To Height			<input type="checkbox"/>			
Volumes - Surface to Surface			<input type="checkbox"/>			
Cut Fill Maps			<input type="checkbox"/>			
Comparison Maps			<input type="checkbox"/>			
POINT CLOUDS						
New Point Cloud Group			<input type="checkbox"/>		<input type="checkbox"/>	
Add & Remove			<input type="checkbox"/>		<input type="checkbox"/>	
Clean & Reduce Point Cloud Group			<input type="checkbox"/>		<input type="checkbox"/>	
Delete Points from Point Clouds			<input type="checkbox"/>		<input type="checkbox"/>	
Colour Mode & Filter Point Cloud			<input type="checkbox"/>		<input type="checkbox"/>	
Clip Plane, Slice or Box			<input type="checkbox"/>		<input type="checkbox"/>	
Reset & Toggle Clip			<input type="checkbox"/>		<input type="checkbox"/>	
POINT CLOUDS REGISTRATION						
Import RTC360 & BLK360						<input type="checkbox"/>
Autocloud Import						<input type="checkbox"/>
Auto Black & White Targets Extraction						<input type="checkbox"/>
Visual Alignment						<input type="checkbox"/>
Create & Delete Virtual Targets						<input type="checkbox"/>
Match Targets						<input type="checkbox"/>
Apply Controls						<input type="checkbox"/>
Create Unified Point Cloud (UPC)						<input type="checkbox"/>
Site Map, Setup & Scan Group View						<input type="checkbox"/>
Assign Technical Points to Targets						<input type="checkbox"/>
Downsampling						<input type="checkbox"/>

Leica Infinity Office Software - Options

	Survey	Advanced Survey	Engineering	Infrastructure	Point Clouds from Images	Point Clouds Registration
IMAGING - MEASURE POINTS IN IMAGES						
New Image Group	<input type="checkbox"/>				<input type="checkbox"/>	
Add & Remove	<input type="checkbox"/>				<input type="checkbox"/>	
Calculate Point From Images	<input type="checkbox"/>				<input type="checkbox"/>	
IMAGING - POINT CLOUDS FROM IMAGES						
Orientate Image Groups					<input type="checkbox"/>	
Create Dense Point Cloud					<input type="checkbox"/>	
Create a Digital Surface Model & Orthophoto					<input type="checkbox"/>	
Add Control Points					<input type="checkbox"/>	
Optimise					<input type="checkbox"/>	
Filter Dense Point Cloud (DPC)					<input type="checkbox"/>	
Processing Reports					<input type="checkbox"/>	
ADJUSTMENT 1D						
Compute Loops, Run-Pre Analysis, Adjustment	<input type="checkbox"/>					
Processing Reports	<input type="checkbox"/>					
ADJUSTMENT 1D, 2D, 3D						
Compute Loops, Run-Pre Analysis, Adjustment		<input type="checkbox"/>				
Processing Reports		<input type="checkbox"/>				
INFRASTRUCTURE						
Create Vertical & Horizontal Alignment				<input type="checkbox"/>		
Create Cross Section & Road Object				<input type="checkbox"/>		
Create Road Material Layer & Surface				<input type="checkbox"/>		
Edit, Link & Unlink Cross Sections				<input type="checkbox"/>		
Extract, Update, Mirror Cross Section				<input type="checkbox"/>		
Create Checked & Staked Road Report				<input type="checkbox"/>		
Create Tunnel Object, Profile & Section				<input type="checkbox"/>		
Assign Rotation Table				<input type="checkbox"/>		
Create Checked & Staked Tunnel Report				<input type="checkbox"/>		
Extract, Mirror Tunnel Profile				<input type="checkbox"/>		
Create Tunnel Profile from CAD				<input type="checkbox"/>		
Add Points Of Interest To Library				<input type="checkbox"/>		

SYSTEM RECOMMENDATIONS

Operating System	Windows 10 - 64 bit, Windows 11
Input	Keyboard, mouse with wheel

HARDWARE

	Minimum	Recommended TPS, GNSS, Level processing	Recommended Image processing, Scan registration
Motherboard	PCIe 3 or greater	PCIe 4 or greater	PCIe 5
Display	1024 × 768 px	Dual 1920 × 1280 px	Dual 1920 × 1280 px
Processor	Multi-core 2.4 GHz	Multi-core 3.5 GHz or greater	Octa-core 3.5 GHz or greater
RAM	8 GB	32 GB or more	64 GB or more, XMP enabled
Disk Storage	100 GB	SSD of 1 TB or more	SSD of 2 TB or more
Graphics	Direct X9 compatible	Direct X11 compatible	Direct X11 compatible
	512 MB	4 GB or more, CUDA capable	8 GB or more, CUDA capable

Copyright Leica Geosystems AG, 9435 Heerbrugg, Switzerland. All rights reserved. Printed in Switzerland – 06-2023.
Leica Geosystems AG is part of Hexagon AB. 808992en – 06.23

Leica Geosystems AG
Heinrich-Wild-Strasse
9435 Heerbrugg, Switzerland
+41 71 727 31 31

- when it has to be **right**

